



NOSE PIECE REMOVAL*

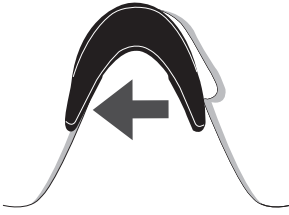

To detach, pull a leg of the nose piece once the leg is disengaged, the nose piece will simply rotate out.


*Should you require corrective lenses, remove the Rx Insert prior to removing or installing the nose piece.

INSTALLING THE RX INSERT STEP 1

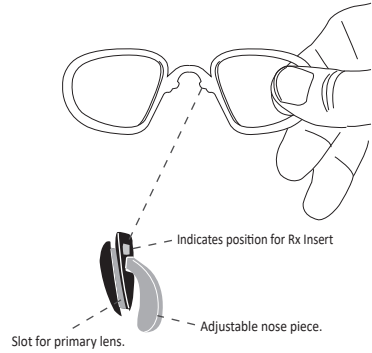


The prescription insert is held in place by aligning the buds on the Rx Insert into the notches on the nose piece.

INSTALLING THE RX INSERT STEP 2

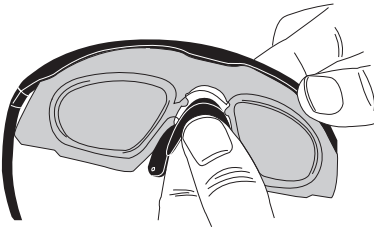

Align the groove of the nose piece into the primary lens.

INSTALLING THE RX INSERT STEP 3

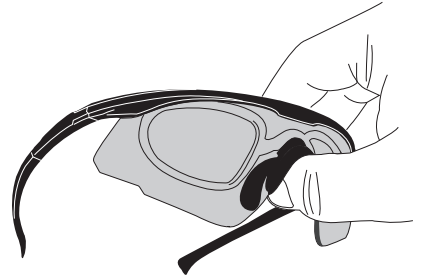

Position hand as pictured above and squeeze into lens until the nose piece completely seats.

MAINTENANCE: Wiley X lenses are specially coated to offer superior abrasion resistance. Please follow below instructions to prolong the life of your lenses and keep them performing at their best:


- Clean lenses with water only.
- Do not use solvents or special cleaners.
- Use micro-fiber cleaning cloth provided to gently wipe clean.
- Never use paper products to clean and avoid wiping lens surface when dry and/or dirty as this may potentially scratch the lens.

WARNING: Wiley X brand eyewear is tested tough. However, impact resistant eyewear is not unbreakable and does not provide unlimited eye protection under all circumstances and conditions. Misused, abused, scratched and/or damaged eyewear can reduce impact protection (and void your limited warranty). Dirty and/or wet eyewear can impair vision and reduce safety (resulting in personal injury and/or property damage). Keep your Wiley X eyewear clean with water only. Do not use solvents or abrasives as it could scratch or damage the product reducing its effectiveness. Store your Wiley X eyewear in the protective case provided to prolong the life of the lenses. Most of all, take all appropriate precautions when wearing your Wiley X eyewear during hazardous and/or dangerous activities and conditions. Wiley X, Inc. is not responsible for personal injury, property damage or losses incurred while using Wiley X brand products.




WX ROGUE INSTRUCTIONS

LENS INSTALLATION STEP 1

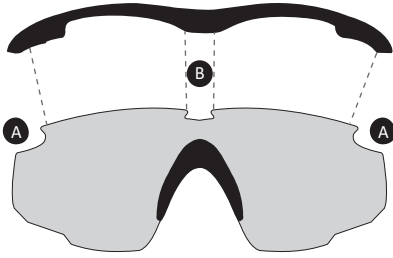

1) Engage lens hooks located at the top outer edge of the lens into the frame. (see A)


LENS INSTALLATION STEP 2

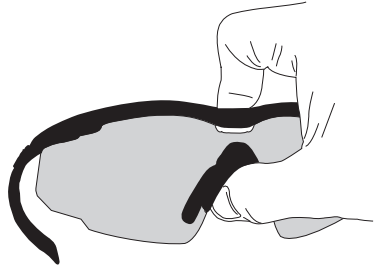


- 2) Align center lens slot into center catch of the frame. (see B)
- 3) Squeeze the lens and frame together as pictured above.

NOSE PIECE INSTALLATION *


1) Align grooves of nose piece into the primary lens.

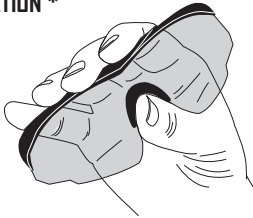

2) Position hand as pictured above and squeeze into lens until the nose piece completely seats.

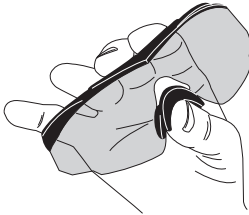


NOSE PIECE ADJUSTMENT

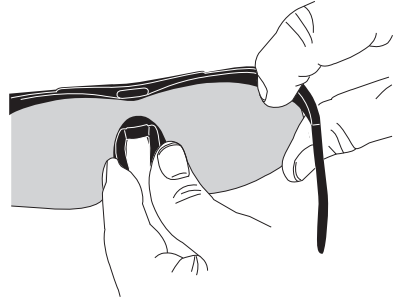

Ballistic spectacles protect best when the entire perimeter of the lens and frame are closest to the wearers face. For your best, most protective fit, adjust the nose piece so that there is minimal gap between the lens, the side of your face and under your eyes.


*Should you require corrective lenses, remove the Rx Insert prior to removing or installing the nose piece.

LENS REMOVAL

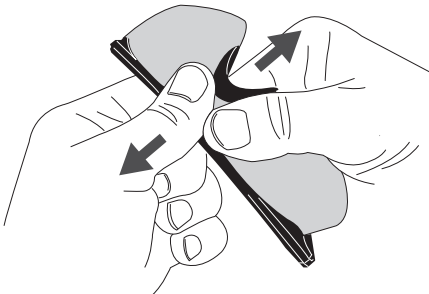

Position one hand to grasp the frame at the center of the brow bar, the other hand directly opposite at the nose piece lens junction, as pictured. Simply pull apart.

TEMPLE TIP STRAP INSTRUCTIONS

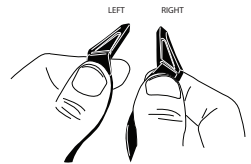

Press firmly on tip to secure.



Position hands as pictured, twist off in opposite directions to remove.

